
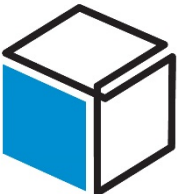


Wire Colors on Stalk Switch

- Yellow- Indicator Light
- Black- Not Used
- Light Blue- Right Turn Signal
- Dark Blue- Not Used
- Green- Left Turn Signal
- Orange- Not Used
- Red- Ground

No external flasher module is required.
The POWERCELL manages the flashing.

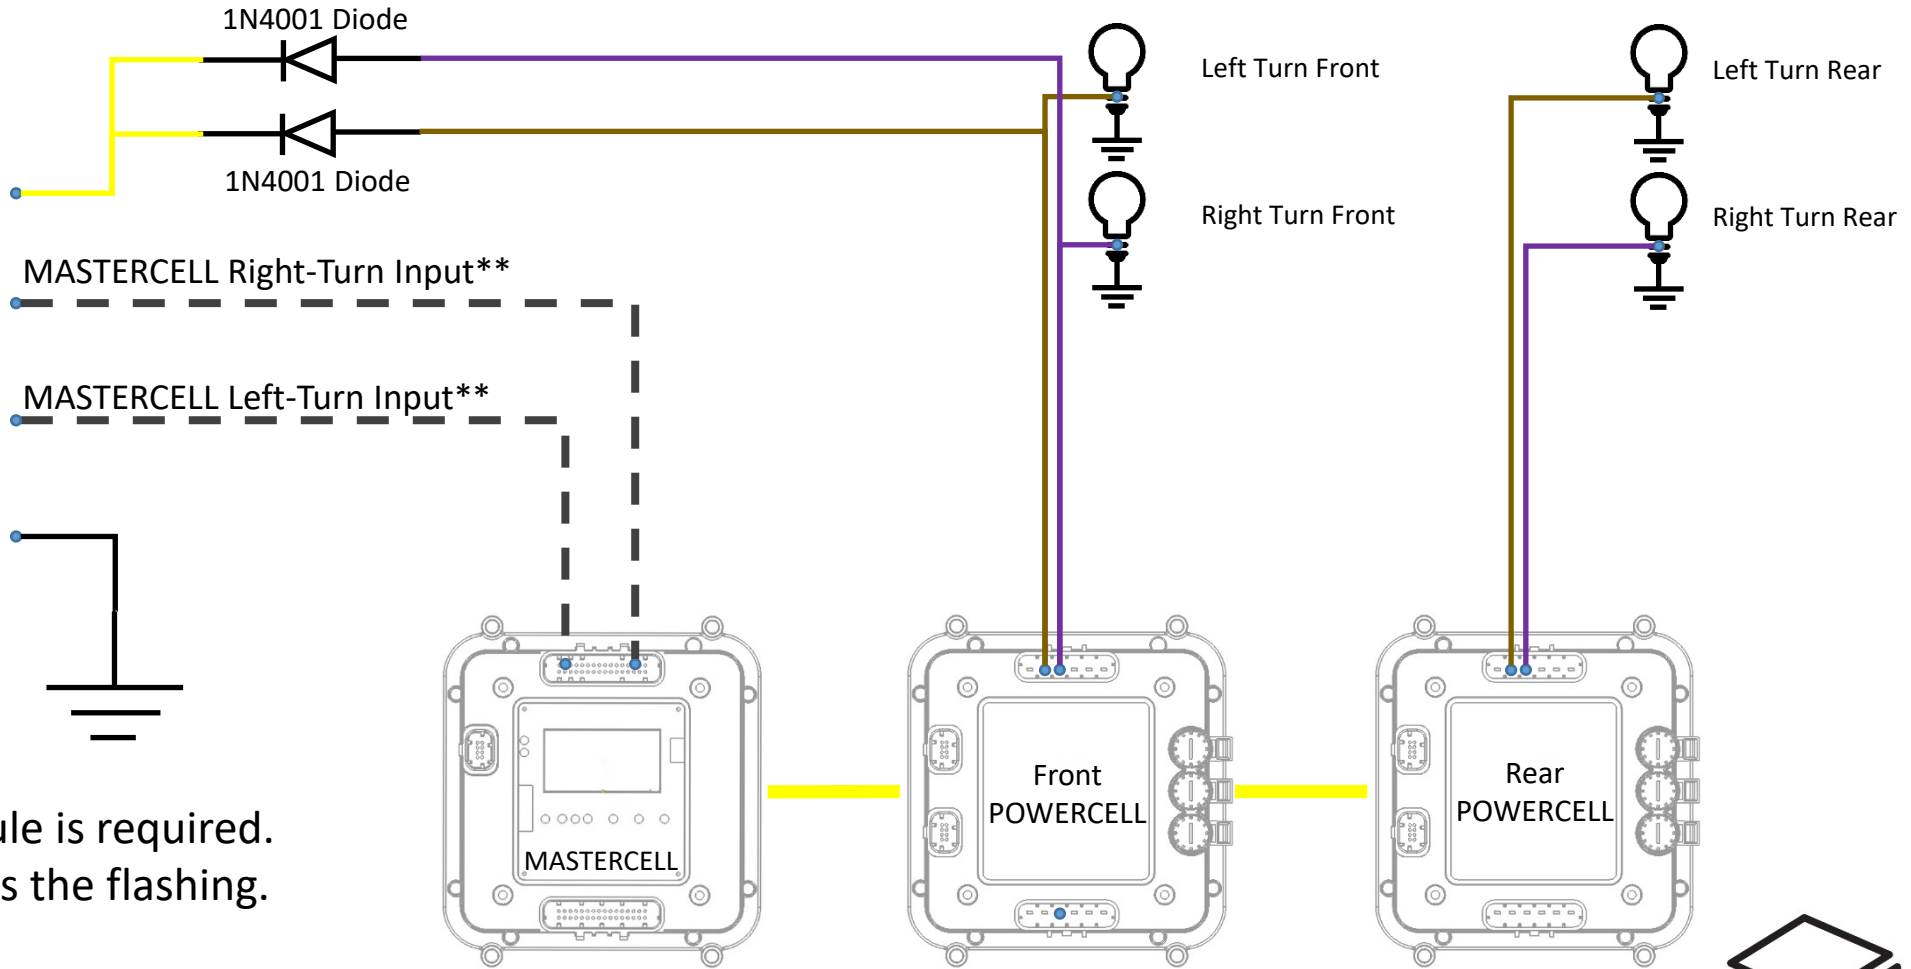

*NOTE: Infinitybox wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.

**NOTE: MASTERCELL inputs must be ground switched. Applying 12-volts directly to an input will damage the MASTERCELL and void the warranty.

***NOTE: Some wiring omitted for clarity. See your Infinitybox manual for details.