
INFINITYBOX

PKE Security Wiring Diagram

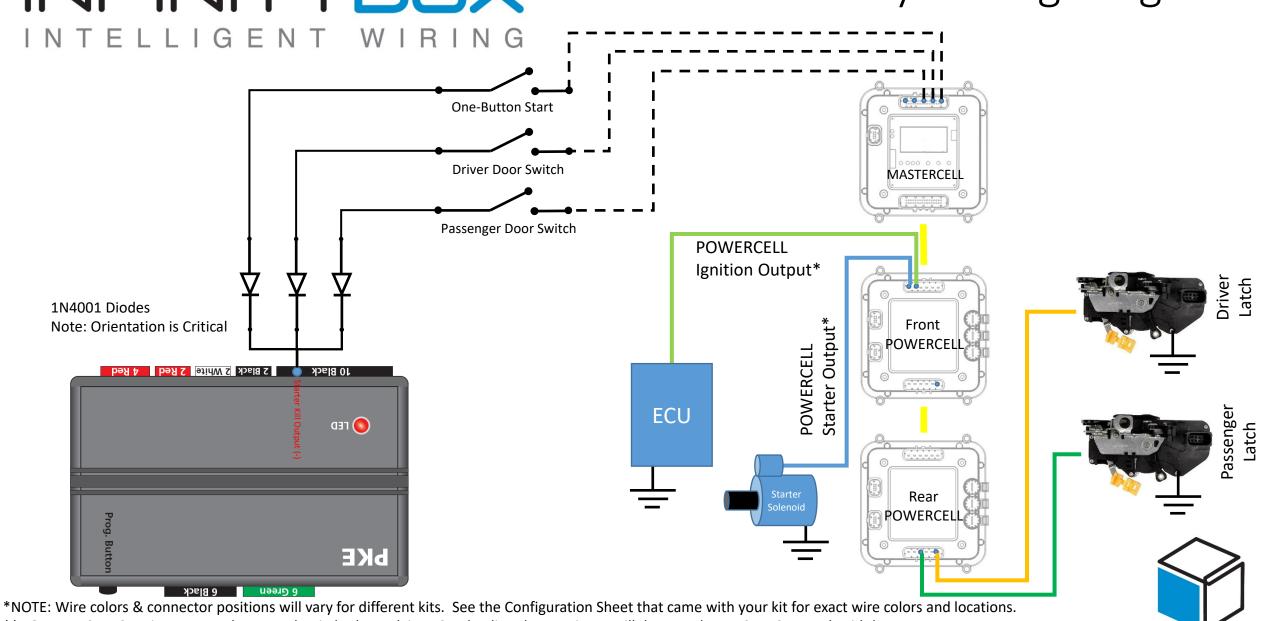

**NOTE: MASTERCELL inputs must be ground switched. Applying 12-volts directly to an input will damage the MASTERCELL and void the warranty.