
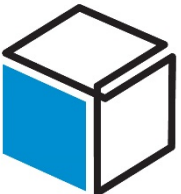


Controlling Headlights & High-Beams from SPDT Switch

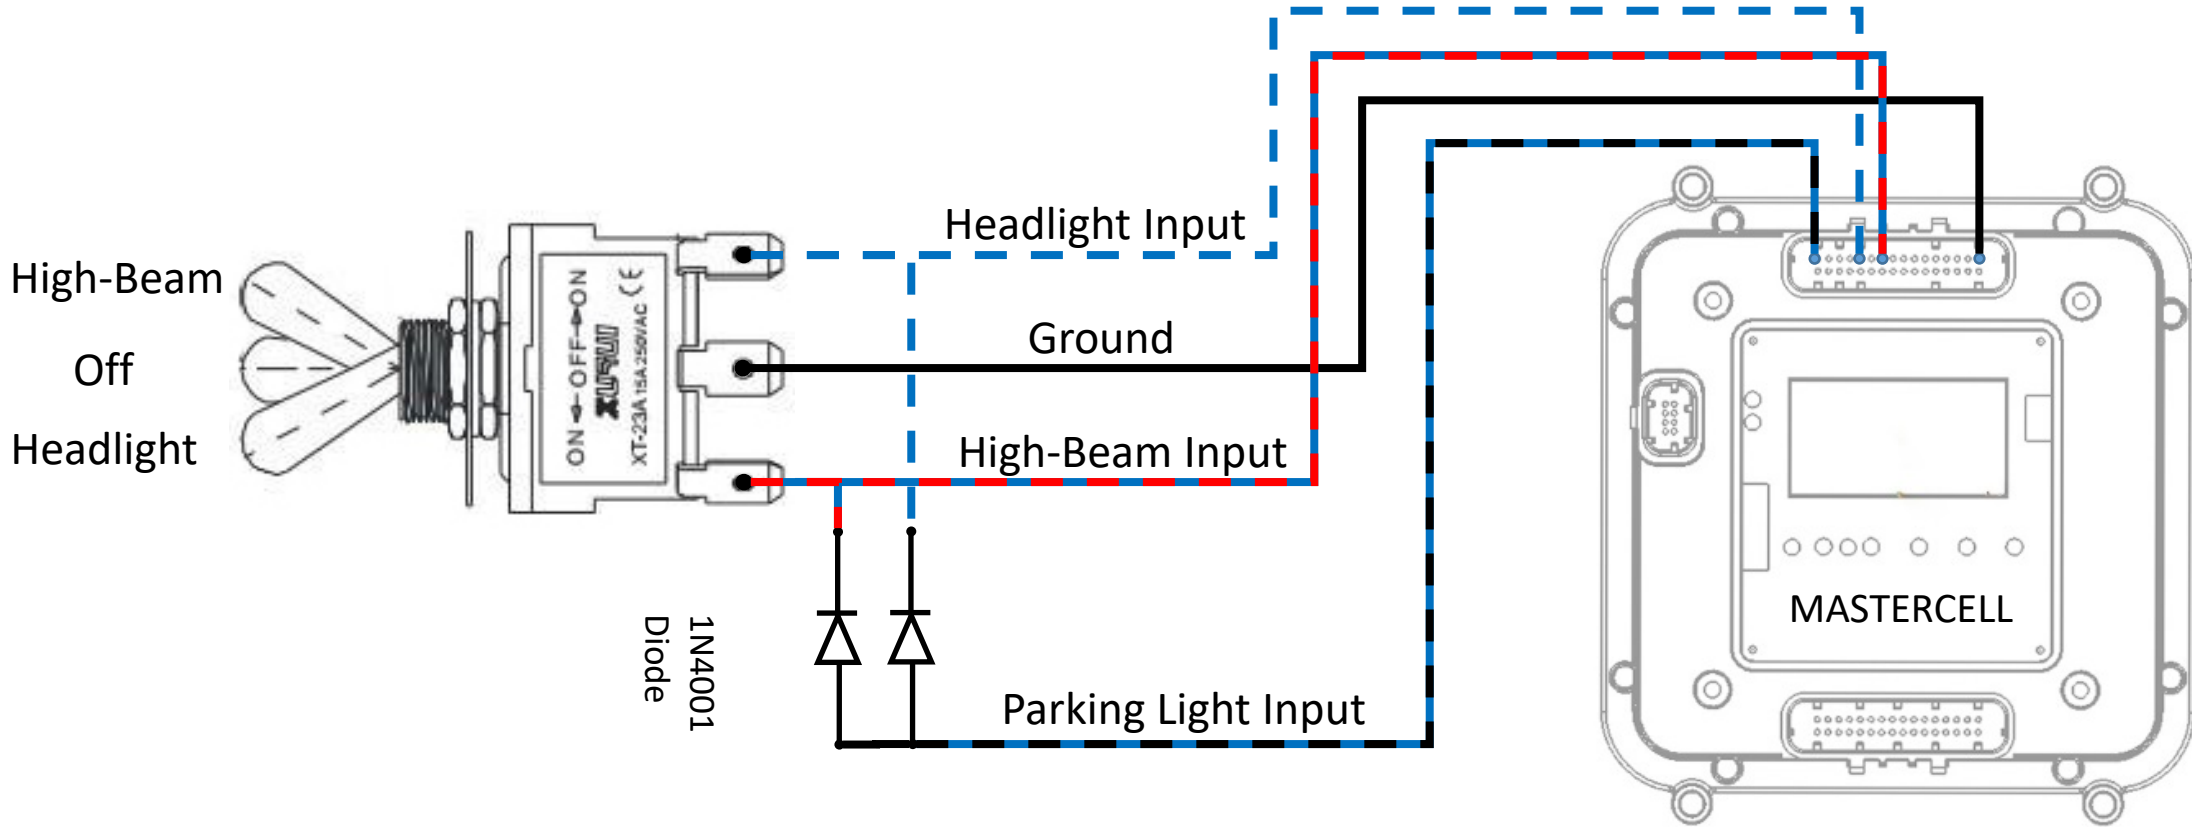

*NOTE: Infinitybox wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.

**NOTE: MASTERCELL inputs must be ground switched. Applying 12-volts directly to an input will damage the MASTERCELL and void the warranty.

***NOTE: Some wires omitted for clarity. See your Infinitybox manual for full details