


## Wiring Speartech LS-58X Harness

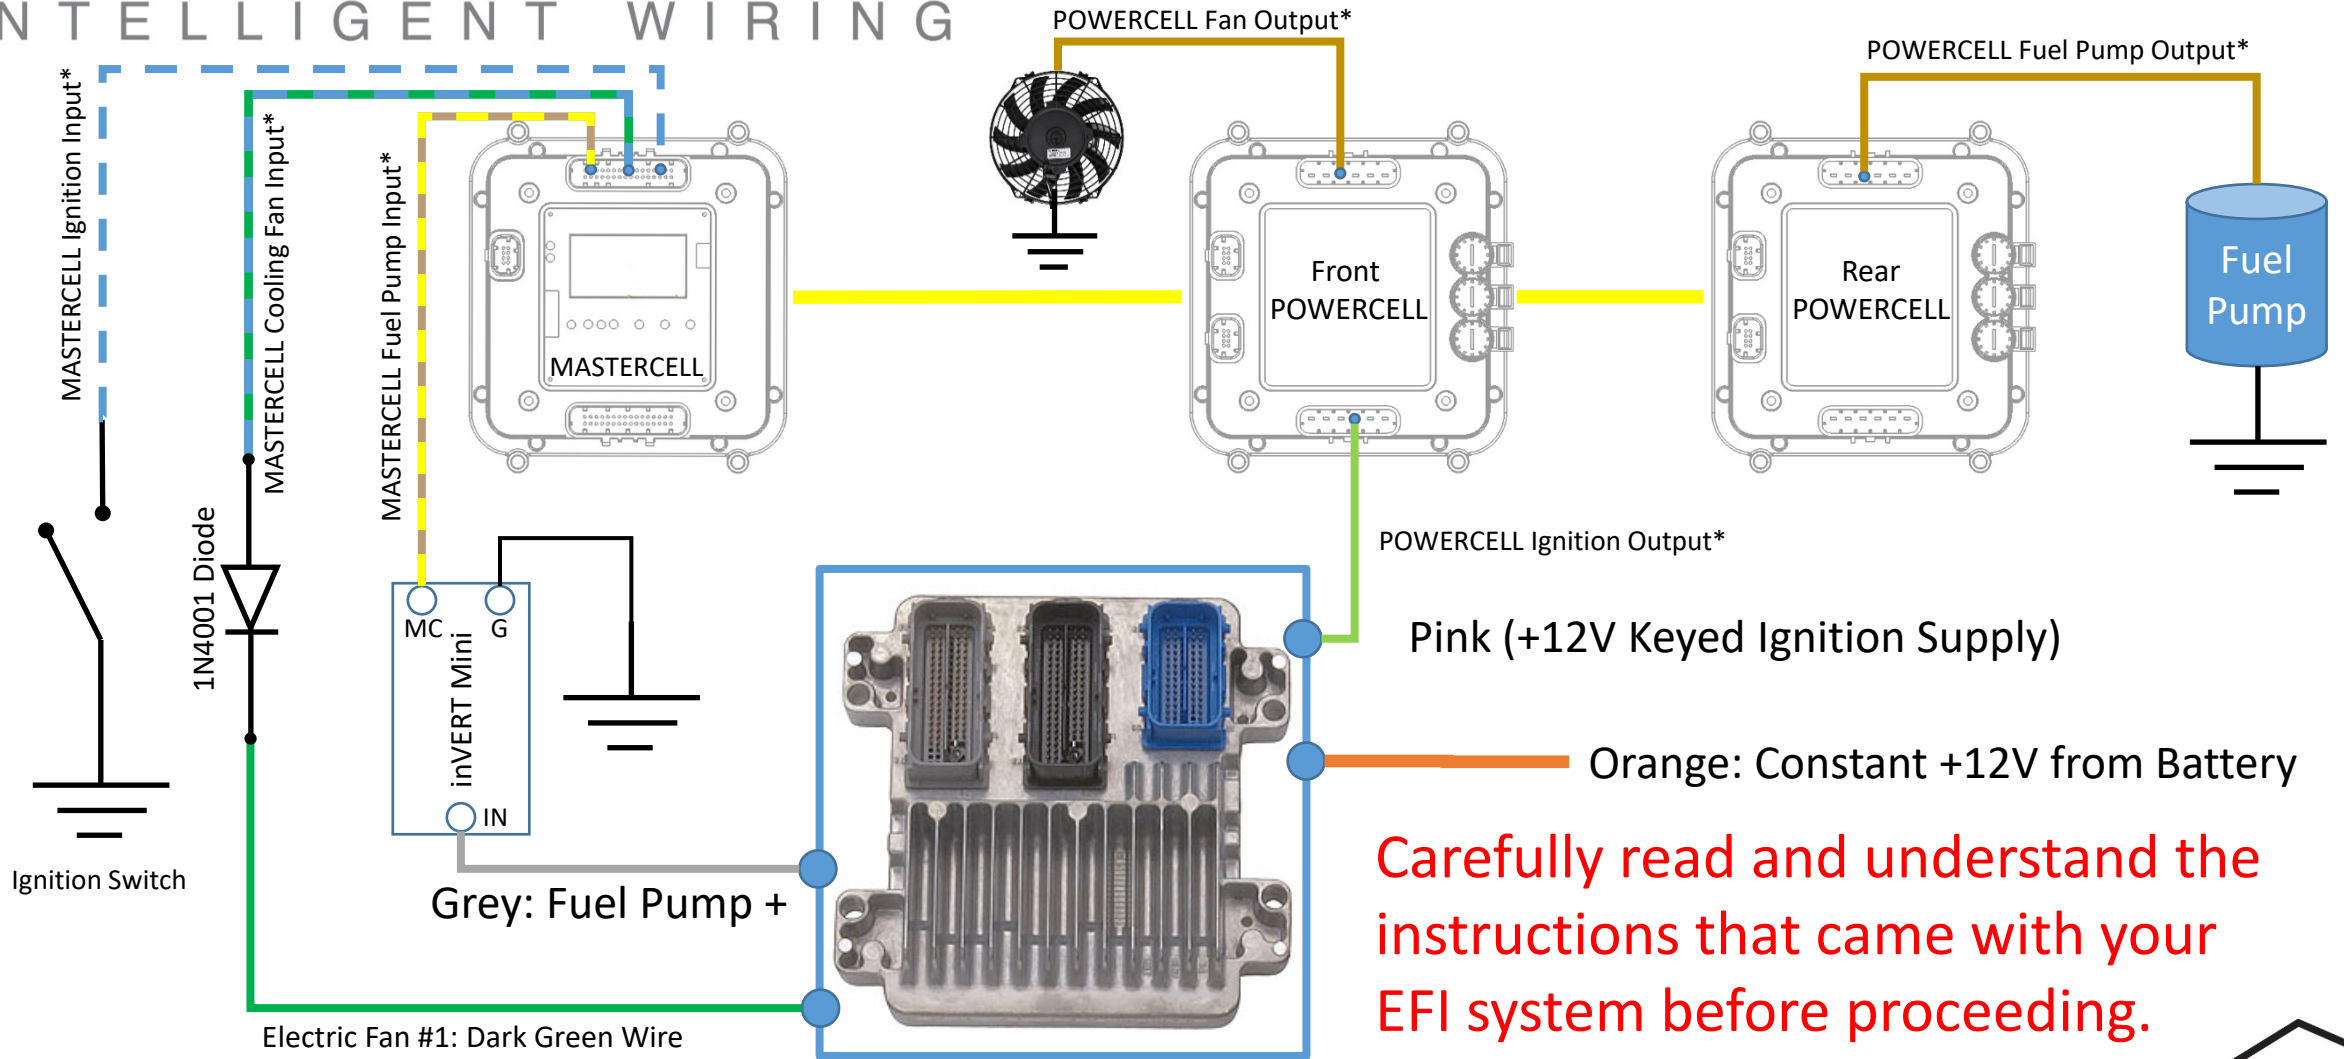

\*NOTE: Infinitybox wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.

\*\*NOTE: MASTERCELL inputs must be ground switched. Applying 12-volts directly to an input will damage the MASTERCELL and void the warranty. Use an inVERT Mini (as shown) or a relay to convert the fuel pump trigger to a ground trigger for the MASTERCELL.

\*\*\*NOTE: Some wiring is omitted for clarity. Follow the instructions that came with your Infinitybox kit and your EFI system for complete instructions.

