


## Wiring 3-Wire Alternator

- Jumper from Terminal 2 to the Battery stud
- Wire to battery must be sized for the full rating of the alternator
- Diode should have a continuous forward current rating of at least 5-amps

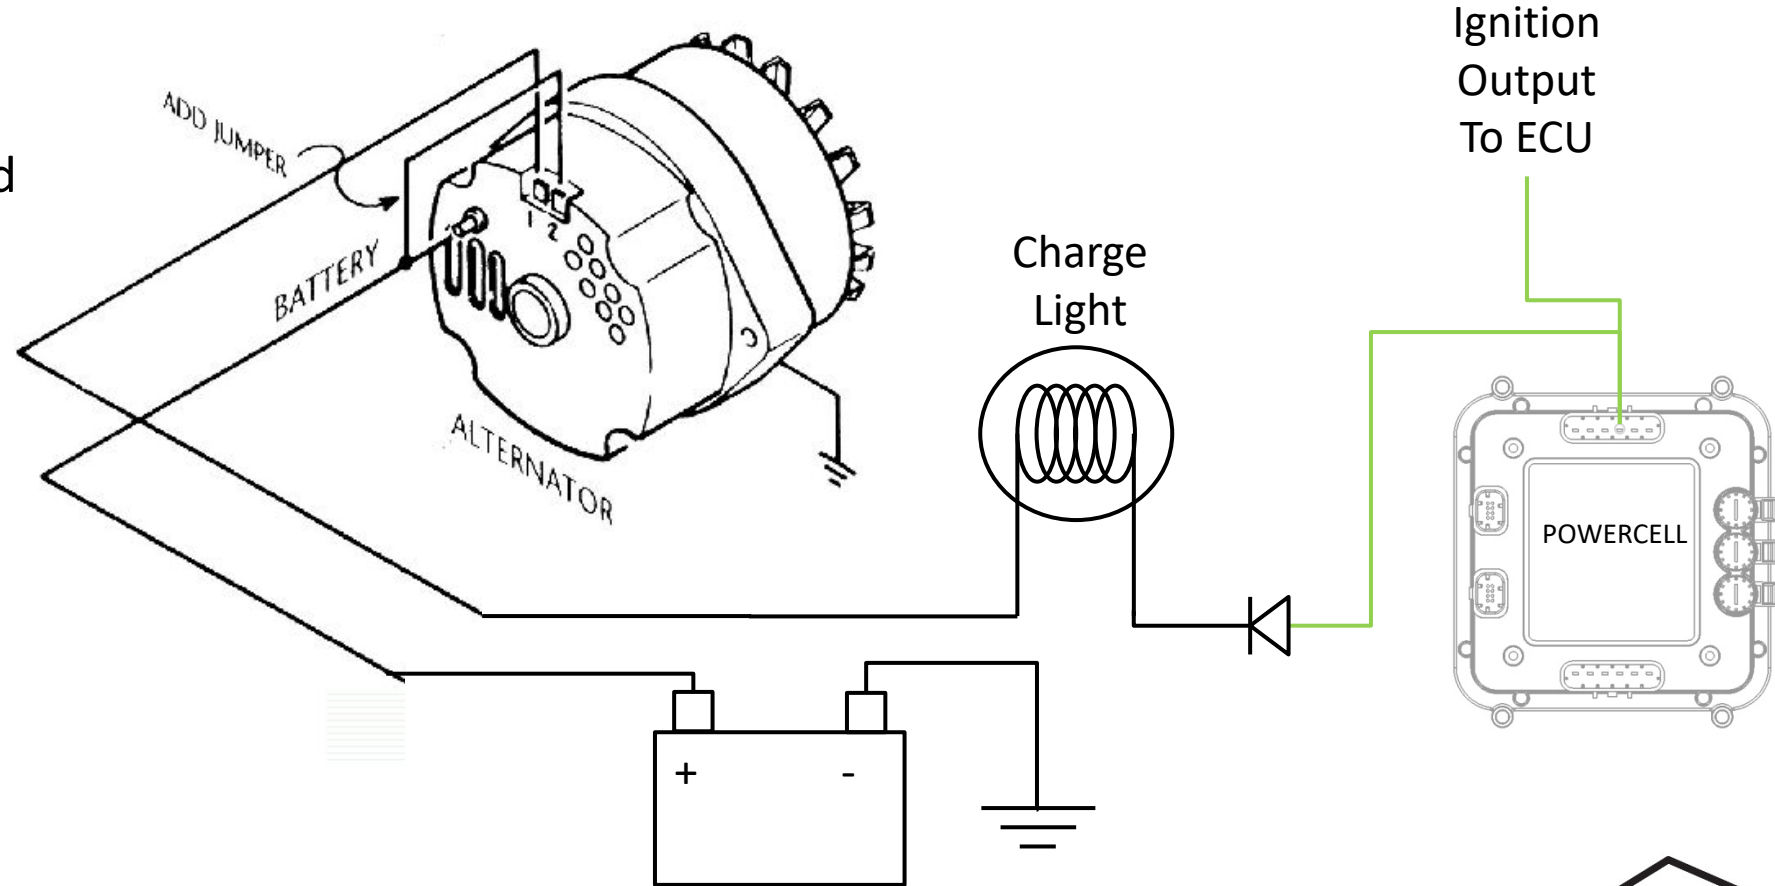

\*NOTE: Infinitybox wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.

