INFINITYBOX

Ignition Switch Wiring Diagram

ACCESSORY Input (OPTIONAL) STARTER Input ACC **Terminal** MASTERCELL **START Terminal IGNITION** Input **POWERCELL** Ignition Output* Starter Output* Front **GNITION or RUN** POWERCEL POWERCELL **BATTERY Terminal Terminal ECU GROUND Switch Conditions Switch Position ACC** ST IGN Rear ACC ON OFF OFF POWERCEL **IGN** ON ON OFF OFF ON ON ST



^{*}NOTE: Wire colors & connector positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.

^{**}NOTE: MASTERCELL inputs must be ground switched. Applying 12-volts directly to an input will damage the MASTERCELL and void the warranty.