
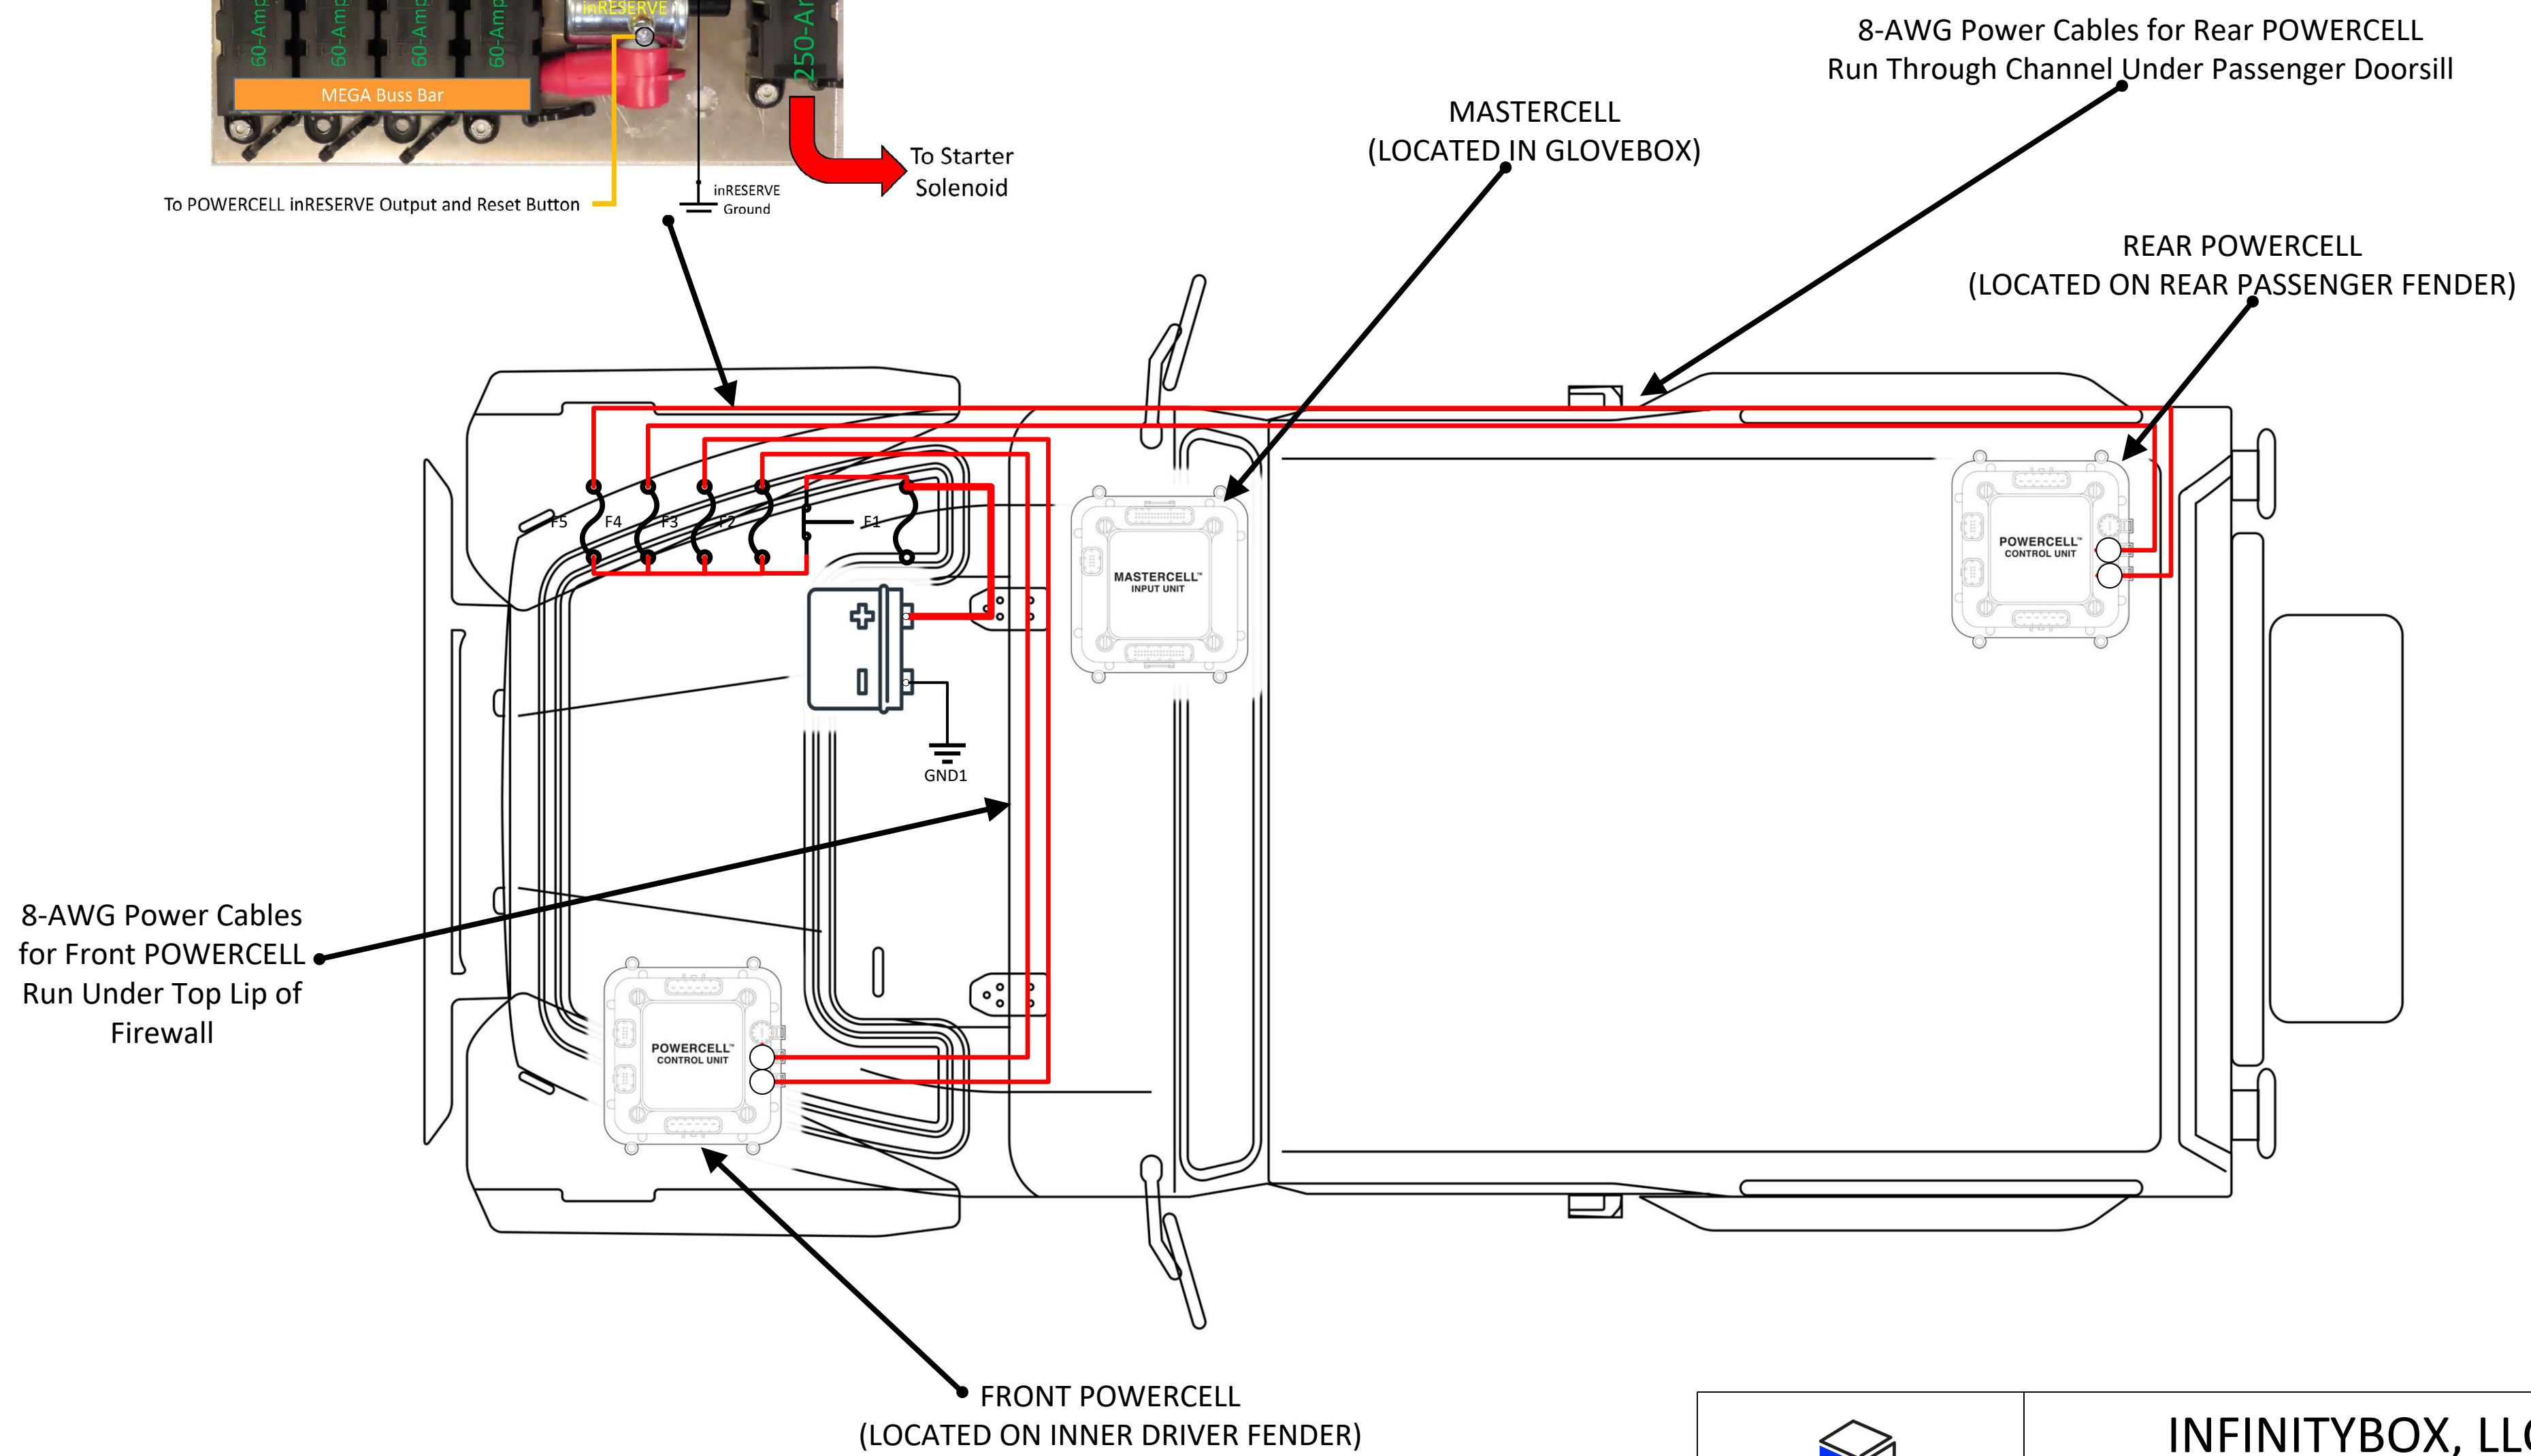


**PRIMARY POWER DISTRIBUTION AND inRESERVE SOLENOID
(LOCATED ON INNER PASSENGER FENDER)**

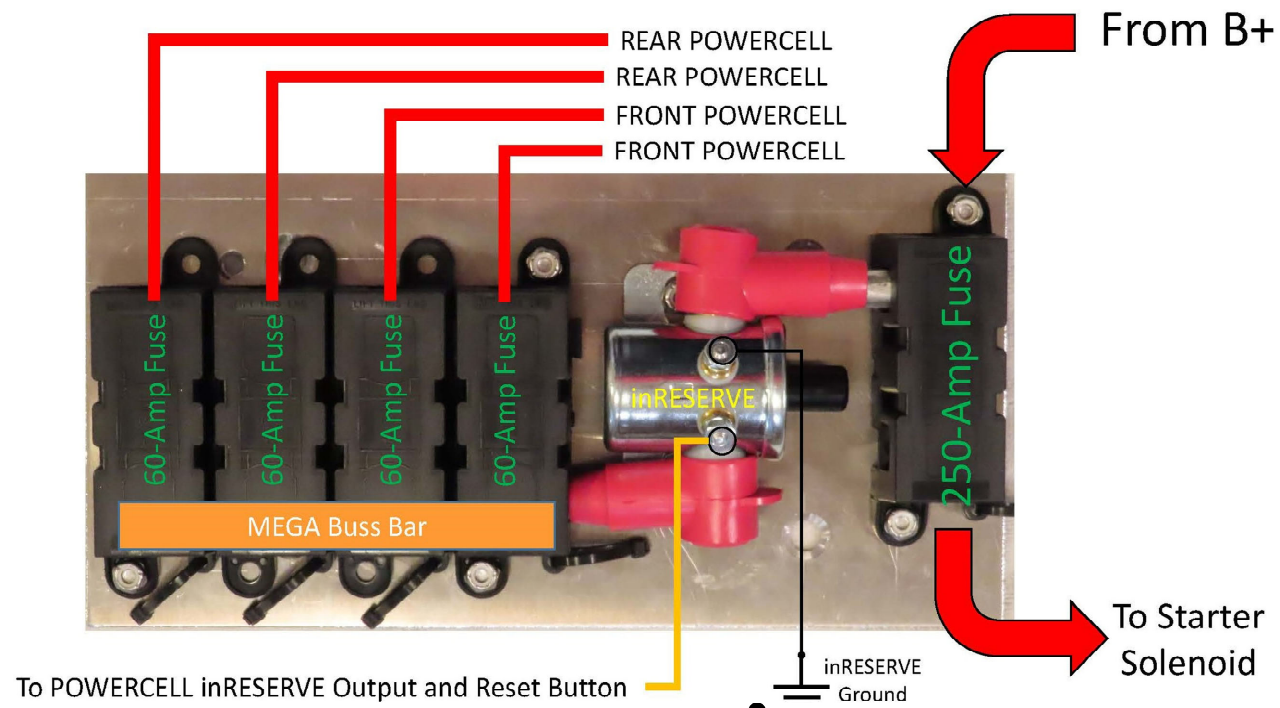

- NOTES:**
1. Carefully read and understand all instructions and manual for your Infinitybox system before wiring. Contact technical support with questions.
 2. Wiring diagrams are intended for reference only. See your manual and specific configuration sheet for proper wire identification.
 3. Some wires omitted for clarity. See your manual for details.
 4. Wire locations on connectors are for reference only. This diagram does not show specific connector cavities. Contact Infinitybox technical support for details.

	INFINITYBOX, LLC			
	1979 Jeep CJ7 Cell Location and Primary Power Routing			
Copyright 2022 Infinitybox, LLC All Rights Reserved.	SIZE C	FSCM NO	DWG NO JEEP 01	REV A
	SCALE N/A		SHEET	1 OF 1